



CARBON FIBER A-ARM GUARD 03-06 REV INSTALLATION INSTRUCTIONS

***Estimated time of installation: 20 min.**

TOOL REQUIRED: #2 Flat Blade Screw Driver


NOTE: A-Arm guards are equipped with adhesive coated foam rubber tape. The purpose of the foam rubber tape is to ease installation and dampen vibration. ** Before removing white paper adhesive protection, familiarize your self with how the A-Arm guards fit by placing them loosely on the A-Arms. By sliding A-Arm Guard too the center of the snowmobile you will remove any play between the A-Arm guard and the A-Arm itself.** Try to A-Arm guard mounted in one shot during installation. Adhesive on foam rubber tape can be damaged if removed after installation.

1.) Position A-Arm guard in desired mounting location. Remove paper adhesive protection. Stick A-Arm guard to A-Arm in desired mounting location. Push edges of A-Arm guard on to A-Arm tubes to ensure all portions of rubber adhesive is contacting A-Arm tubes.



2.) Repeat step one on opposite side A-Arm.

3.) Wrap provided rubber strips around A-Arm tubes inline with mounting holes. Rubber strips are used to protect A-Arm tubes from being scratched by hose clamps.

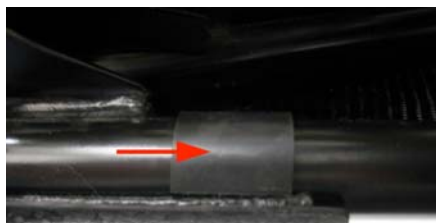

Rubber strip on A-Arm tube to prevent hose clamp scratching.



Hose clamp centered in rubber protective strip.

4.) Used supplied hose clamps to secure A-Arm guards to A-Arms. Position hose clamp screws to face the rear of the machine.

5.) Tighten hose clamps until they are snug.

Please call or email if you need specific technical help
(508) 896-7313/info@rpmcomposites.com.