



AIR FILTER SCREEN GUARD INSTALLATION INSTRUCTIONS REV XP CHASSIS

***Estimate time of installation: 20-30 min.**

TOOLS REQUIRED: Tape Measure * Ice Pick/Scribe/Push Pin * Magic Marker * Sharp 5/32” Drill Bit * Electric or Cordless. Drill * 2.5mm Allen Key * 7mm Wrench/Socket * Sharp Razor Knife

Note: Steps 1 & 2 will be performed with hood installed on machine. Remove hood for Steps 3 – 6.

- 1.) Using tape measure and magic marker, measure 2 7/16 ”- 2 1/2” from rear edge of hood as shown in Photo #1. Mark hood with marker dot at this location. Use this dot to reference starting point when marking hole locations.



Photo #1

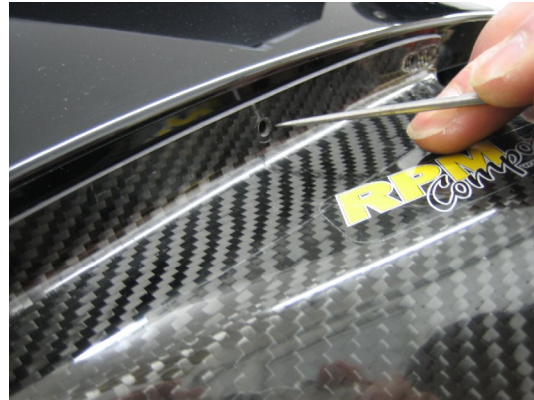


Photo #2

- 2.) Use Air Filter Guard as a template to carefully mark the center of each hole with ice pick or marking tool as shown in Photo #2.
- 3.) Remove hood and drill each marked hole location with sharp 5/32” drill bit.
- 4.) Using sharp razor knife trim out molded flashing on inside of hood to provide clearance for washer and nut as shown in Photo #3.



Photo #3

- 5.) Install 4mm fasteners and washers through Air Filter Guard into hood.
- 6.) Install washers and nuts onto back side of hood. Tighten fasteners & nuts evenly until snug.

Please call or email if you need specific technical help.
(508) 896-7313/info@rpmcomposites.com.